Olaqin

Acteur essentiel des innovations e-santé

Liteo-2D


Product Reference Guide

Confidentiel

Olaqin

15/11/2022

Version 1

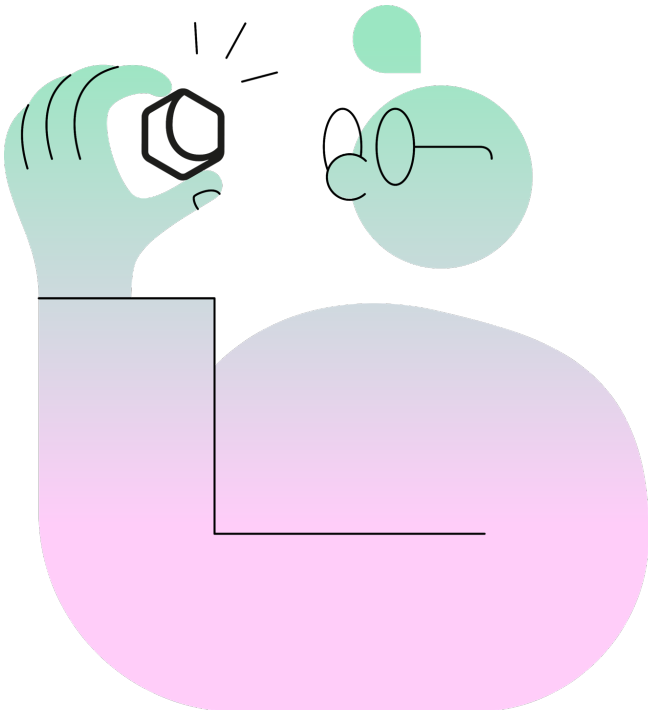

Olaqin

Olaqin
S.A.S. au capital de 10 931 186 €
852 722 750 R.C.S. Nanterre

28 quai Gallieni
92150 Suresnes – France
Tél : +33 (0)1 87 15 99 99

Table des matières

1. Getting Started 1
1.1. About this manual 1
1.2. Interface selection 1
2. Function Mode Settings 2
2.1. Working mode 2
2.2. Sensitivity settings 2
2.3. Same bar code interval 3
2.4. Bar code Enable/Disable 4
2.5. Image anti-white 4
2.6. Vibration settings 4
2.7. Lighting settings 5
2.8. Beeper setting 6
2.9. Beeper duration 6
2.10. Sleep mode 7
2.11. Class 3 lighting setting 7
2.12. Double read timeout settings 7
2.13. RS-232 Interface Options 8
2.14. Data bits 9
2.15. Stop bits 9
2.16. Calibration settings 9
3. Output Configuration 11
3.1. Enter/Newline settings 11
3.2. Serial port output settings 11
3.3. Language output configuration for wireless devices (serial port) 12
3.4. Keyboard mode output 12
3.5. Bar code save/removal 12
Remove bar code from start/end 12
Save data from start/end 13

3.6. Set bar code length 13
3.7. Additional code settings 14
3.8. Keyboard Mode Output 14
3.9. Keyboard layout 15
3.10. Analog keyboard 17
3.11. Case conversion 17
3.12. Testing mode 17

4. Bar code Configuration 19

4.1. Bar code configuration 19
4.1.1. Airline 2of 5 19
4.1.2. Aztec Code 19
4.1.3. Coda bar 19
4.1.4. Coda block A 20
4.1.5. Coda block F 20
4.1.6. Code 128 20
4.1.7. Code 11 20
4.1.8. Code 32 20
4.1.9. Code 39 21
4.1.10. Code 93 21
4.1.11. Composite 21
4.1.12. Data Matrix Code 22
4.1.13. EAN/UPC 22
4.1.14. EAN-8 23
4.1.15. EAN-13 23
4.1.16. Full ASCII Code39 24
4.1.17. GS1 DataBar Expanded 24
4.1.18. GS1 Data Bar Limited 24
4.1.19. GS1 DataBar Omnidirectional 25
4.1.20. HAN XIN 25
4.1.21. Hong Kong 2 of 5(China Post) 25
4.1.22. Interleaved 2 of 5 25
4.1.23. Matrix 2 of 5 26
4.1.24. Maxicode 26
4.1.25. Micro PDF417 26
4.1.26. Micro QR Code 26
4.1.27. MSI 27
4.1.28. PDF 417 27
4.1.29. Pharm code 27
4.1.30. QR Code 27
4.1.31. Straight 2 of 5 Industrial 28
4.1.32. Telepen 28
4.1.33. Trioptic Code 29
4.1.34. UPC-A 29
4.1.35. UPC-E 30

5. Special Function Configuration (Example) 31

5.1. Set the prefix and suffix of 2 of 5 only 31
5.2. Scan the billing information code 31
5.3. Configuration only outputs the first 24 characters 32

5.4. Page Chinese Input Settings 33
5.5. Programming mode 33
5.6. Bar code Type Table 35
5.7. Byte code values (decimal)..... 37
5.8. Code ID..... 37
5.9. Annex: Code ID Table 38
Add prefix..... 39
5.10. Byte code values (decimal)..... 41
5.11. Annex: ASCII Code Table..... 42
5.12. ASCII code extension character (CP-1252 code)..... 43
5.13. Annex: ASCII Character Reference Table..... 44
6. Other Settings 46
6.1. Ctrl+X mode..... 46
6.2. ALT+digital keyboard..... 46

1. Getting Started

1.1. About this manual

This manual provides the most common and some special settings, including different types of bar code settings, function settings (lighting, keyboard interface, and default setting, etc.), and interface settings. If you need to change these settings, custom programming can be accomplished by scanning the bar codes in this guide.
With (*) indicates the most common default for a feature/option.


FFFFFE

Resetting the standard product defaults

If you are unsure of what programming options are in your scanner, or you've changed some options and want the factory settings restored, scan the "Standard Product Default Settings" bar code below. This will copy the factory configuration for the currently active interface to the current configuration.


AD8771

Save to user configuration


FFFFF7

Restore user configuration

1.2. Interface selection

Identify as USB keyboard type and scan the "USB keyboard" bar code. USB can be recognized as a USB COM type, which requires the user to install a driver.


FFBFFE

USB keyboard (USB Keyboard


FFBFFD

USB COM (Virtual serial port)

2. Function Mode Settings

This chapter can configure the function mode of the equipment, including working mode (such as image anti-white), Aimer setting, lighting configuration, LED indicator setting and beeper setting, etc. Kindly scan the corresponding configuration code according to the requirements in turn.

2.1. Working mode


7E9AA2
***Manual trigger mode**


7E9AA0
Automatic scan mode

2.2. Sensitivity settings

Automatic scan mode sensitivity is 15 class, class 1 highest, class 15 lowest.


B67A61


B67A62


B67A63


B67A64


B67A610


B67A615


B67A65


B67A68

2.3. Same bar code interval

Interval setting about automatic scan mode on same bar code


7EFD61
50 ms


7EFD62
100 ms


7EFD63
150 ms


7EFD64
200 ms


7EFD65
250 ms


7EFD66
300 ms


7EFD68
400 ms


7EFD610
500 ms


7EFD616
800 ms

2.4. Bar code Enable/Disable


FFFEFD
Enable all bar codes


FFFEFC
Disable all bar codes


FFFEFB
Enable all 1-D codes


FFFEFA
Disable all 1-D codes


FFFEF9
Enable all QR codes


FFFEF8
Disable all QR codes

2.5. Image anti-white


B678A1
Image Back White


B678A0
***Normal image**

2.6. Vibration settings


A87761
Enable vibration


A87760
***Disable vibration**

2.7. Lighting settings


B66771
***Aimer on**


B66770
Aimer off


B66781
***Light on**


B66780
Light off


B66890
***Normal LED indicator**


B66891
LED indicator reverse


B66892
LED indicator is always on


B66893
LED indicator is always off

2.8. Beeper setting

Note: This is the optional function, needs interface board support.



B667D0
***Enable**



B667D1
Disable

2.9. Beeper duration



7EA7A0
Normal



7EA7A1
Short



7EB9B7
2.7 kHz



7EB9B6
1.6 kHz



7EB9B5
2.0 kHz



7EB9B4
2.4 k



7EB9B3
3.1 kH



7EB9B2
3.5 kHz



7EB9B11
4.2 kHz

7EB9B0
No sound

2.10. Sleep mode

ADBE610
10 Seconds

ADBE6100
100 Seconds

2.11. Class 3 lighting setting

ADC960
Class I

ADC961
Class II

ADC962
Class III

2.12. Double read timeout settings

B6AE620
30 Seconds

B6AE640
60 Seconds

B6AE680
120 Seconds

B6AE6120
180 Seconds

B6AE6160

240 Seconds

B6AE6200

480 Seconds

2.13. RS-232 Interface Options

RS-232 interface

FFBFFF
RS-232
RS-232 baud rate

7BEA60
300

7BEA61
600

7BEA63
2400

7BEA64
4800

7BEA65
***9600**

7BEA67
19200


7BEA68
38400


7BEA69
57600


7BEA610
115200

2.14. Data bits


7C6790
7 Data Bits


7C6791
8 Data Bits

2.15. Stop bits


7C67A0
2 Stop Bits


7C67A1
1 Stop Bits

2.16. Calibration settings


7C69B0
O


7C69B1
S


7C69B2
E


7C69B3
M


7C69B4
N

3. Output Configuration

This chapter can configure the output of the device, including entering/newline, add prefix/ suffix, fixed bar code length decoding, remove bar code number (start/end removal) and multi-country keyboard switching settings, etc. You only need to scan the corresponding configuration code as required.

3.1. Enter/Newline settings


7CC791
Add enter


7CC790
Cancel enter


7CC781
Add newline


7CC780
Cancel newline

3.2. Serial port output settings


A6C8A2
Serial Output GBK


A6C8A1
Serial Output UTF-8


A7C961
CP932 coding output


A6C8A0
Serial Port Outputs by Bar code Content

3.3. Language output configuration for wireless devices (serial port)

1. Unicode Set Serial Output UTF-8", GBK Set Serial Output GBK "
2. If you want to remove the identifier in front of the bar code, set "remove the identifier in front of the bar code ".
3. If the transfer in Word ", set "Microsoft Word transfer". If Excel & Notepad output, set" Microsoft Excel& Notepad transfer "


A86781

Remove the bar code front marker


A86770

Microsoft word transmission


A86771

Microsoft Excel& Notepad Transfer

3.4. Keyboard mode output

Keyboard mode can be output to Chinese, if you need to output to Chinese, please scan the corresponding configuration code as required. (The default state is no Chinese, but other national languages are available)


A67960

***Default**


A67961

Notepad available word, not available for excel, purposes


A67962

Notepad, excel, not word available

3.5. Bar code save/removal

Remove bar code from start/end

The number of digits "B68E6X "can be removed from the start and at the end at the same time. (X is the number of digits removed, the last 1 represents the removal of one bit, if 2 removes two bits if 0 is not removed normally.)


B68E61

Remove bar code 1 bit from the start

Delete the bar code "B6BE6X" from the end (X is the number of digits removed, the last 1 represents the removal of 1 bit, if 2 removes two bits, if 0 is not removed normally.)


B6BE61
Remove bar code 1 bit at the end

Note: bar code can be used at the same time

Save data from start/end

You can only choose to save the start or the end data, can not save both at the same time. Scan the number of bits of the bar code from the start"AC8760", the number of bits of the bar code from the end" AC8761", then scan the reserved number bar code.


AC8760
Save the start data


AC8761
Save the end data


B69E69
Save of 9 bits of data

B69E6X" X is the number of digits reserved. For example, keeping 9 bits is B69E69, up to 255.

3.6. Set bar code length


67EE61
Length 1


67EE6255
Length 255


67FE60
Fixed Bar code Length

3.7. Additional code settings


6787D1
Enable 2-bit additional code


6787D0
***Disable 2-bit additional codes**


6787C1
Enable 5-bit additional code


6787C0
***Disable 5-bit additional digits**


678791
All UPC/EAN codes must have additional codes


678790
***No additional codes are required**

3.8. Keyboard Mode Output

Keyboard mode can be output to Chinese, if you need to output to Chinese, please scan the corresponding configuration code as required. (The default state is no Chinese, but other national languages are available)


A67960
***Default**


A67961
Notepad available word, QQ, not available for excel, note


A67962
Notepad, excel, the word is not available

3.9. Keyboard layout


7C8A60
Belgium


7C8A61
Britain


7C8A62
France


7C8A63
Germany


7C8A64
Italy


7C8A65
Spain


7C8A66
United States


7C8A68
Singapore


7C8A69
El Salvador


7C8A610
Japan


7C8A611
Sierra Leone


7C8A612
Turkey


7C8A613

Russia


7C8A615

Russian (Russia)


7C8A614

Hungary


A69E616

Thai


A69E620

Spanish Latin keyboard


A69E626

Algeria


A69E629

Italy 142 Keyboard


A6A761

Enable full ASCII code input

3.10. Analog keyboard

If you may need to type your character in the form of an ASCII code, you can configure the corresponding configuration code to simulate the keyboard as required.


A6A761
Enable Analog keyboard


A6A760
Disable Analog keyboard


A6A771
Enable the analog keyboard in front of zero


A6A770
Disable Analog Keyboard Front Zero

3.11. Case conversion


A68861
Convert to Lower Case


A68862
Convert to Upper Case


A68860
Default setting

3.12. Testing mode

After configured to test mode, the device automatically triggers decoding every other second.


FFFFFC
Enable blink test mode



***Disable blink test model**

4. Bar code Configuration

This chapter can be used for bar code configuration, UPC/EAN, included Code bar code, Code39, Full ASCII Code39, Interleaved 2of 5, Code93, UPC-A, GS1 Data Bar Omnidirectional, GS1 Data Bar Expanded, PDF417, QR Code, Hong Kong 2of 5(China Post) and Airline 2 of 5 support bar code configuration, you just need to scan the configuration code as required. (default *)

4.1. Bar code configuration

4.1.1. Airline 2of 5


6667A1
Enable


6667A0
***Disable**

4.1.2. Aztec Code


66C761
Enable


66C760
***Disable**

4.1.3. Coda bar


6677A1
***Enable**


6677A0
Disable

4.1.4. Coda block A


8CA761
Enable


8CA760
***Disable**

4.1.5. Coda block F


8CA771
Enable


8CA770
***Disable**

4.1.6. Code 128


667791
***Enable**


667790
Disable

4.1.7. Code 11


666791
Enable


666790
***Disable**

4.1.8. Code 32


6687B1
Enable*

6687B0

Disable

4.1.9. Code 39

667771
***Enable**

667770
Disable

4.1.10. Code 93

667781
Enable

667780
***Disable**

4.1.11. Composite

A66761
Enable

A66760
***Disable**

4.1.12. Data Matrix Code

66B791
***Enable**

66B790
Disable

A7F7D1
Enable DM mirror

A7F7D0
***Disable DM mirror**

66B780
***Disable DM anti-color**

66B883
Enable DM positive and negative color

4.1.13. EAN/UPC

6677C1
***Enable**

6677C0
Disable

4.1.14. EAN-8


6687A1
***Enable**


6687A0
Disable


6DF761
***Enable EAN-8 Check Digit transmission**


6DF760
Disable EAN-8 Check Digit transmission


6DB781
Enable EAN-8 converted to EAN-13


6DB780
***Disable EAN-8 conversion to EAN-13**

4.1.15. EAN-13


668771
***Enable**


668770
Disable


6DF781
***Enable EAN-13 Check Digit transmission**


6DF780
Disable EAN-13 calibration bits transmission

A87781
Enable Remove check code spaces

A87780
*** Disable Remove check code spaces**

4.1.16. Full ASCII Code39

6687D1
Enable

6687D0
Disable

4.1.17. GS1 DataBar Expanded

66A7B1
Enable

66A7B0
***Disable**

4.1.18. GS1 Data Bar Limited

66A7A1
Enable

66A7A0
***Disable**

4.1.19. GS1 DataBar Omnidirectional


66A791
Enable


66A790
***Disable**

4.1.20. HAN XIN


8D9771
Enable


8D9770
***Disable**

4.1.21. Hong Kong 2 of 5(China Post)


6697C1
Enable


6697C0
***Disable**

Notice：When reading a postal, all other postal need close.

4.1.22. Interleaved 2 of 5


6677B1
***Enable**


6677B0
Disable

4.1.23. Matrix 2 of 5


6667B1
Enable


6667B0
***Disable**

4.1.24. Maxicode

Enable


66C7A1


66C7A0
***Disable**

4.1.25. Micro PDF417


66A7D1
Enable


66A7D0
***Disable**

4.1.26. Micro QR Code


66C7B1
Enable


66C7B0
***Disable**

4.1.27. MSI


668781
Enable


668780
***Disable**

4.1.28. PDF 417


666761
***Enable**


666760
Disable

4.1.29. Pharm code


ACF7B1
Enable


ACF7B0
***Disable**

4.1.30. QR Code


66C781
***Enable**


66C780
Disable


A6E760

***Enable Access to web site QR codes**

A6E761
Disable Close URL QR code

A86761
Enable QR mirror

A86760
***Disable QR mirror**

66C791
Enable QR anti-color

66C790
***QR anti-color off**

4.1.31. Straight 2 of 5 Industrial

667761
Enable

667760
***Disable**

4.1.32. Telepen

6667D1
Enable

6667D0
***Disable**

4.1.33. Trioptic Code

Enable


669781


669780
***Disable**

4.1.34. UPC-A


6687C1
***Enable**


6687C0
Disable


6DB7D1
***Enable UPC-A output Check Digit**


6DB7D0
Disable UPC-A output Check Digit


6DB771
***Enable Output UPC-A digital system characters**


6DB770
Disable output UPC-A digital system characters


6DB7A1
Enable UPC-A converted to EAN-13


6DB7A0
***Disable UPC-A converted to EAN-13**

4.1.35. UPC-E

668761
***Enable**

668760
Disable

6DB7C0
***Disable UPC-E output Check Digit**

6DB7C1
Enable UPC-E output Check Digit

6DB790
***Disable UPC-E send the first characters**

6DB791
Enable UPC-E to send the first character

6DB7B1
Enable UPC-E extended to 12 bits

6DB7B0
***Disable UPC-E extended to 12 bits**

5. Special Function Configuration (Example)

This chapter enumerates some configuration examples used by the equipment and expounds the configuration method of the special function in detail, which is convenient for the user to operate to be familiar with the use of the product.

5.1. Set the prefix and suffix of 2 of 5 only

Prefix



A6A7D1
Enable



A6A7D0
Disable

Suffix



7CC7D1
Enable



7CC7D0
Disable

5.2. Scan the billing information code

Scan the following configuration code in turn:



A6C8A1
Serial Output GBK

Note: wireless settings or RS 232 need to scan the serial port output GBK then scan "Output GBK content", Open billing information.



A67962
Output GBK content



A6C791
Enable the billing function

A6C790
Disable the billing function

5.3. Configuration only outputs the first 24 characters

If you need to scan the bar code value is (9866986546667779696961239696969688)
Scan the following configuration code in turn:

B69781

B68E624

Display all information (need to configure Chinese output configuration):

A67960
Default

A67962
Notepad, excel, the word is not available

Used word, notepad, and excel are not available

5.4. Page Chinese Input Settings

Scanning from top to bottom:

FFFFFE
Recall Default

A67964
Utf-8 coding (available word, notepad, excel are not available)

7CC790
Disable Enter

7CC780
Disable newline

FFFFFF
Suffix plus #(configuration plus # configuration below)

5.5. Programming mode

Fixed Length Decoding

(up to 6 bar code types are supported for fixing length)

Add a single bar code type fixed-length configuration flow:

Example 1

Lock CODE 128 bar code length is 10, CODE 128 bar code type byte value is 083.

1. Scan the "Enter/Exit programming mode" bar code.
2. Scan "configure bar code type 1 length ".
3. Scan byte code values in turn "0","1","0".
4. Scan "configure bar code type 1 byte value ".
5. Scan byte code values in turn "0","8","3".
6. Scan the "enter/exit programming mode " bar code.

Add multi-bar code type length locking:

Example 2

1. Scan the "Enter/exit programming mode" bar code.
2. Scan "configure bar code type 1 length ".
3. Scan byte code values in turn.
4. Scan "configure bar code type 1 byte value ".
5. Scan byte code values in turn.
6. Scan "configure bar code type 2 length ".
7. Scan byte code values in turn.

8. Scan "configure bar code type 2 byte value ".
9. Scan byte code values in turn.
10. Scan the "enter/exit programming mode ".


FFFFFF
Enter/Exit programming mode


686F60
Configuration bar code Type 1 Length


687F60
Configure bar code type 1 byte


688F60
Configuration bar code Type 2 Length


689F60
Configure bar code type 2 byte


68AF60
Configuration bar code Type 3 Length


68BF60
Configure bar code type 3 byte


68CF60
Configuration bar code Type 4 Length


68DF60
Configure bar code type 4 byte


68EF60

Configuration bar code Type 5 Length


68FF60

Configure bar code type 5 byte


696F60

Configuration bar code Type 6 Length


697F60

Configure bar code type 6 byte

5.6. Bar code Type Table

Bar code byte value	Bar code type
002	UPC-E
003	EAN-8
004	UPC-A
005	EAN-13
080	CODE 39
081	CODABAR
082	INTERLEAVED 2OF 5
083	CODE 128
084	CODE 93
091	MSI
092	CODE 11
093	AIRLINE 2OF 5
094	MATRIX 2OF 5
095	TELEPEN
096	UK PLESSEY
097	AIRLINE (13DIGITs)
098	STANDARD 2OF 5
099	TRIOPTIC
101	RSS14
102	RSS LIMIT
103	RSS EXT
104	PDF417
105	MICRO PDF417

106	**DATA MATRIX**
107	**AZTEC**
108	**QR**
109	**MAXICODE**

5.7. Byte code values (decimal)


1


2


3


4


5


6


7


8


9


0

5.8. Code ID


A8E7A1

Enable Output Code ID


A8E7A0

Disable Code ID output

5.9. Annex: Code ID Table

Bar code	Code ID	Bar code	Code ID
Code128	j	Plessey	n
GS1-128	j	matrix 2of 5	m
CODE39	b	industrial 2of5	F
EAN8	D	IATA 2OF 5	f
EAN13	d	CHINESE POST 2OF 5	Q
UPC-E	E	code 11	h
UPC-A	c	MSI	g
interleaved 2of 5	e	Code93	i
ITF-14		RSS-14	y
Coda bar	a	RSS-Limited	{
RSS-Expanded	}	GM Code	X
QR Code	s	Micro PDF 417	R
PDF417	r	Micro QR	-
Data Matrix	w	USPS Post net	P
Aztec Code	z	USPS Intelligent Mail	
Maxi code	x	Royal Mail	
HMS Code	H	USPS Planet	L
KIX Post	K	Australian Postal	A

Add Prefix

(Up to 10 characters, respectively)

Add prefix process:

Example: add a byte prefix, the character is "(", the corresponding ASCII code decimal number is 040.

1. Scan the "Enter/exit programming mode".
2. Scan "configuration prefix 1st byte ".
3. Scan byte code values in turn "0","4","0".
4. Scan the "Enter/exit programming mode ".

Add suffix flow: similar to adding a prefix.

Add a prefix of multiple bytes:

Example 3, add multiple byte prefixes

1. Scan the “Enter/exit programming mode".
2. Scan "configuration prefix 1st byte ".
3. Scan the first-byte code in turn.
4. Scan "configuration prefix 2nd byte ".
5. Scan the second-byte code value in turn.
6. Repeat 4,5, step...
7. Scan the "Enter/exit programming mode".

Add a suffix of multiple bytes: similar to adding multiple prefixes.

Clear all prefixes: Scan the clear all prefix bar code.
Clear all suffixes: Scan the "clear all prefix" bar code.


FFFFFF
Enter/Exit programming mode

Add prefix


69BF60
Configure prefix 1 byte


69CF60
Configure prefix 2 bytes


69DF60
Configure prefix 3 bytes


69EF60
Configure prefix 4 bytes


69FF60
Configure prefix 5 bytes


6A6F60
Configure prefix 6 bytes


6A8F60
Configure prefix 7 bytes


6A7F60
Configure prefix 8 bytes


6A9F60
Configure prefix 9 bytes


6AAF60
Configure prefix 10 bytes


FFFFEB
Clear all prefixes

Add Suffix


6ABF60
Configure suffix 1 byte


6ACF60
Configure suffix 2 bytes


6ADF60
Configure suffix 3 bytes


6AEF60
Configure suffix 4 bytes


6AFF60
Configure suffix 5 bytes


6B6F60
Configure suffix 6 bytes


6B7F60
Configure suffix 7 bytes


6BAF60
Configure suffix 8 bytes


6B9F60
Configure suffix 9 bytes


6B8F60
Configure suffix 10 bytes


FFFFEA

Clear all suffixes

5.10. Byte code values (decimal)


1


2


3


4


5


6


7


8


9


0

5.11. Annex: ASCII Code Table

Decimal	Character	Decimal	Character	Decimal	Character	Decimal	Character
000	NUL	032	SP	064	@	096	‘
001	SOH	033	!	065	A	097	a
002	STX	034	"	066	B	098	b
003	ETX	035	#	067	C	099	c
004	EOT	036	$	068	D	100	d
005	ENQ	037	%	069	E	101	e
006	ACK	038	&	070	F	102	f
007	BEL	039	`	071	G	103	g
008	BS	040	(	072	H	104	h
009	HT	041	)	073	I	105	i
010	LF	042	*	074	J	106	j
011	VT	043	+	075	K	107	k
012	FF	044	,	076	L	108	l
013	CR	045	—	077	M	109	m
014	SOH	046	.	078	N	110	n
015	SI	047	/	079	O	111	o
016	DLE	048	0	080	P	112	p
017	DC1	049	1	081	Q	113	q
018	DC2	050	2	082	R	114	r
019	DC3	051	3	083	S	115	s
020	DC4	052	4	084	T	116	t
021	NAK	053	5	085	U	117	u
022	SYN	054	6	086	V	118	v
023	ETB	055	7	087	W	119	w
024	CAN	056	8	088	X	120	x
025	EM	057	9	089	Y	121	y
026	SUB	058	:	090	Z	122	z
027	ESC	059	;	091	[	123	{
028	FS	060	<	092	\	124	|
029	GS	061	=	093	]	125	}
030	RS	062	>	094	^	126	~
031	US	063	?	095	_	127	DEL

5.12. ASCII code extension character (CP-1252 code)

Decimal	Character	Decimal	Character	Decimal	Character	Decimal	Character
128	€	160		192	A	224	a
129		161	¡	193	A	225	a
130	‚	162	¢	194	A	226	a
131	*ƒ*	163	£	195	A	227	a
132	„	164	¤	196	A	228	a
133	…	165	¥	197	A	229	a
134	†	166	¦	198	Æ	230	æ
135	‡	167	§	199	C	231	c
136	ˆ	168	¨	200	E	232	e
137	‰	169	©	201	E	233	e
138	S	170	ª	202	E	234	e
139	‹	171	«	203	E	235	e
140	Œ	172	¬	204	I	236	i
141		173		205	I	237	i
142	Z	174	®	206	I	238	i
143		175	¯	207	I	239	i
144		176	°	208	Đ	240	ð
145	‘	177	±	209	N	241	n
146	’	178	²	210	O	242	o
147	“	179	³	211	O	243	o
148	”	180	´	212	O	244	o
149	·	181	µ	213	O	245	o
150	–	182	¶	214	O	246	o
151	—	183	·	215	×	247	÷
152	˜	184	¸	216	Ø	248	ø
153	™	185	¹	217	U	249	u
154	s	186	º	218	U	250	u
155	›	187	»	219	U	251	u
156	œ	188	¼	220	U	252	u
157		189	½	221	Y	253	y
158	z	190	¾	222	Þ	254	þ
159	Y	191	¿	223	ß	255	y

5.13. Annex: ASCII Character Reference Table

Non-printable ASCII control characters			Keyboard Control +ASCII (CTRL Keyboard Control +ASCII X) Mode		
DEC	HEX	Char	Control +X Mode Off	Windows Mode Control +X Mode On	
				CTRL +X	CTRL +X function
000	00	NUL	NULL	CTRL+@	
001	01	SOH	NP Enter	CTRL+A	Select all
002	02	STX	Caps Lock	CTRL+B	Bold
003	03	ETX	Right Arrow	CTRL+C	Copy
004	04	EOT	Up Arrow	CTRL+D	Bookmark
005	05	ENQ	NULL	CTRL+E	Center
006	06	ACK	NULL	CTRL+F	Find
007	07	BEL	Enter	CTRL+G	
008	08	BS	Left Arrow	CTRL+H	History
009	09	HT	Tab	CTRL+I	Italic
010	0A	LF	Down Arrow	CTRL+J	Justify
011	0B	VT	Tab	CTRL+K	hyperlink
012	0C	FF	Backspace	CTRL+L	list,left align
013	0D	CR	Enter /Ret	CTRL+M	
014	0E	SO	Insert	CTRL+N	New
015	0F	SI	ESC	CTRL+O	Open
016	10	DLE	F11	CTRL+P	Print
017	11	DC1	Home	CTRL+Q	Quit
018	12	DC2	PrtScn	CTRL+R	
019	13	DC3	Delete	CTRL+S	Save
020	14	DC4	Tab+shift	CTRL+T	
021	15	NAK	F12	CTRL+U	
022	16	SYN	F1	CTRL+V	Paste
023	17	ETB	F2	CTRL+W	
024	18	CAN	F3	CTRL+X	
025	19	EM	F4	CTRL+Y	
026	1A	SUB	F5	CTRL+Z	
027	1B	ESC	F6	CTRL+[	
028	1C	FS	F7	CTRL+\\	
029	1D	GS	F8	CTRL+]	
030	1E	RS	F9	CTRL+^	

031	1F	US	F10	CTRL+-	

Note: you need to turn on invisible character transfer when you need to output function keys.
Off CTRL+X mode (note: CTRL CTRL+XX default off)


A867D1

Enable transmission of invisible characters


A867D0

***Disable transmission of invisible characters**

Note :(if you want to transfer the function key must be turned on, and must be turned off if not needed)

6. Other Settings

6.1. Ctrl+X mode

ABF771

Enable Ctrl+X mode

***Disable Ctrl+X mode**

ABF770

6.2. ALT+digital keyboard

A6A761

Enable ALT with the digital keyboard

A6A760

***Disable ALT with the digital keyboard**

